

ASSEMBLY INSTRUCTIONS

1.- Index


1 Index	2
2 Introduction	3
3 Wheel assembly	
4 Handlebar fastening	
5 Placing saddle	
6 Pedals assembly	
7 Change from fixed gear pinion to flip flop system	8

2.- Introduction

When you buy a Pepita you will receive that partially assembled.

Following these simple instructions you will able to enjoy your Pepita with minimal effort.

In the diagram below you can see detailed the name and position of all parts:

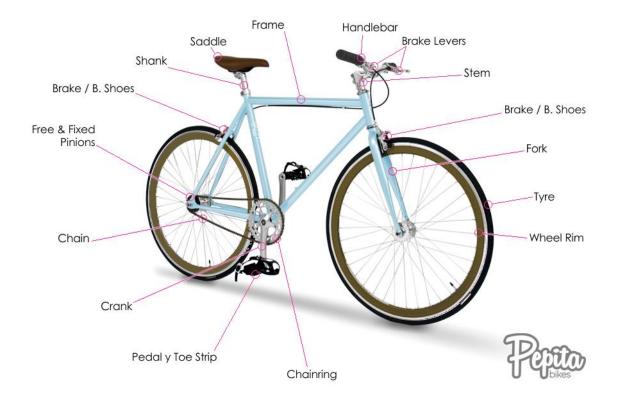

v.1.0 Page **3** of **9**

3.- Wheel assembly

To install the front wheel first you have to cut the ties with which it is attached to the frame.

Place the wheel into position on the fork, place the washers and tighten it with a 15 spanner.



Be careful not to damage the paint!

v.1.0 Page **4** of **9**

4.- Handlebar fastening

If the handlebar is double height you have to set it to the stem tightening the 4 screws with a 4 Allen wrench.

If the handlebar is a road handlebar you have to set it to the stem with a screw and 8 Allen wrench.

v.1.0 Page **5** of **9**

5.- Placing saddle

- 1. Place the shank in the saddle with a 6 Allen wrench.
- 2. Insert the anti-reflective in the seat post.
- 3. Hold the clamp in the frame and do not tighten at all.
- 4. Insert the seat post into the frame and tighten the clamp to convenient height with a 5 Allen wrench.

v.1.0 Page **6** of **9**

6.- Pedals assembly

You just have to screw the pedals in the bottom bracket. Each one goes in one direction (for pedaling).

Check very well the correct position to avoid cross-thread screws. You have to use a 15 spanner.



You can know the right and the left pedals looking at the toe strip.

v.1.0 Page **7** of **9**

7.- Change from fixed gear pinion to flip flop system

If you want to change the rear wheel pinion, loosen the turnbuckle with a 10 spanner, and if it is possible use a box spanner.

Then loosen the nuts with a 15 spanner.

Push the wheel forward to release the chain and take the wheel.

Turn over and place it just doing the opposite steps that you followed to remove.

v.1.0 Page **8** of **9**



Camino de Chueca S/N 45100, Sonseca (Toledo) Spain Telf. (+34) 925 382 790 Fax. (+34) 925 381 806 info@pepitabikes.com sales@pepitabikes.com

v.1.0 Page **9** of **9**